

## Tuning

- Using the Tuning Button



- Manual Tuning  
Λ tunes to a higher frequency  
V tunes to a lower frequency
- Automatic Tuning  
Push the appropriate button until a beep is heard.  
Λ tunes to a higher frequency  
V tunes to a lower frequency

- Using the Control Assist Buttons

1. Push the **選局** control assist button.



2. Push the **▽選局△** control assist button.  
Λ tunes to a higher frequency  
V tunes to a lower frequency

Automatic tuning is possible by pushing and holding the appropriate button until a beep is heard.

