

Advice:

- Audio operation is not possible when the panel is open. Gently push in a tape to close the panel.
- The panel will automatically close in the following situations:
 - The ignition is turned to LOCK
 - The panel is left open for 30 seconds without a tape in the tape insertion slot.
- This player automatically responds to metal tape, chrome tape, and normal tape types.

Ejecting the Tape

When the eject button (panel open/close button) is pushed, the panel will open, and the tape can be removed.

Fast Forward and Reverse

Push the **早送り** (fast forward) or **巻戻し** (reverse) control assist button.

Push the **PLAY** control assist button to stop this function and resume playback at desired point.



Playing the Reverse Side

Push the **反転** control assist button.

