

LISTENING TO THE RADIO

To switch the power on, push the power switch or the AM/FM button.
When in a different mode (such as tape, CD, MD), switch the unit to radio mode.
When in radio mode set the broadcast to AM or FM.
The station and frequency currently being received will be displayed on screen.

Advice:

If reception of a station is weak, the station name may not be displayed.

