

When the CD button is pushed, the CD changer will begin playback.

### Internal Tape Player Type

Each time the CD button is pushed the mode will change as follows:

Tape → Navigation Unit CD → CD Player  
(or In-Dash CD Changer) → CD Changer  
→ MD Player → MD Changer

(The mode of devices not connected will not be displayed.)

### Internal MD Player Type

Each time the CD button is pushed the mode will change as follows:

MD Player → Navigation Unit CD → CD  
Player (or In-Dash CD Changer) → CD  
Changer → MD Changer

(The mode of devices not connected will not be displayed.)

### **Disc Select**

Push the ディスク control assist button to select the desired disc.

Λ will increase the disc number

∨ will decrease the disc number

### **Cuing Desired Track**

Select the desired track number by pushing the track selection button or the トラック control assist button.

Λ will increase the track number

∨ will decrease the track number

