

Average Vehicle Speed

Displays the average vehicle speed since the **リセット** control assist button was pushed until now.

Average Fuel Consumption Gasoline Only

Displays the average fuel consumption since the **リセット** button was pushed

Advice:

- When the average fuel consumption cannot be measured, '--. -km/l' will be displayed.
- Average fuel consumption changes depending on driving conditions (road condition, driving style).

Actual fuel consumption may differ to that displayed, so use as a reference.

Remaining Drivable Distance Gasoline Only

Using the remaining fuel, this displays the remaining distance that the vehicle can be driven.

If this distance reaches below 50km, the display will flicker.

Refuel as soon as possible.

Advice:

- The remaining drivable distance will be reset when refueling. Also, when the fuel level is low, the correct measurement will not be displayed, so when refuelling, fill the fuel tank up as much as possible.
- The remaining drivable distance will display the previous fuel consumption data up until now, but this will change depending on the driving conditions. Also, if the battery terminal is removed, all fuel consumption data will be cleared, so the displayed value may differ.
Use the display as a reference.