

Tape Handling

- Do not use 120 minute tapes.
Long-playing tapes over 90 minutes in length use very thin tape which can jam in the deck.
- Store tapes in their cases, away from direct sunlight which can cause damage.
- Remove looseness in the tape before use.
- Please do not use tapes with peeling labels or on which stickers have been applied as this can cause poor tape rotation and jamming.
- The tape-head area inside the deck that plays tapes gets dirty easily so please clean using a cleaning tape about once every month.
- Please do not apply oil to tape deck or insert anything except a cassette tape in the tape insertion slot as this can damage the deck.
Do not insert fingers as the inside may be very hot.

Compact Disc Handling

- Only CDs with the following mark can be used in the CD player and CD changer.
Heart-shaped, hexagonal, and other novelty shaped CDs that do not conform to JIS standards could damage the player if used.



- Condensation may form on the audio system internal parts or the disc directly after using the heater, or when the temperature increases suddenly, and this could prevent correct operation. Wait a while before using.
- CDs may skip in rough driving conditions such as when driving on rough roads.
- Always store CDs in their cases, away from direct sunlight and areas of high temperatures.