 


## Changing the Channel

- Using the tuning button

If given a short push, the channels will change one by one.

If pushed continuously until a beep is heard, the channel will automatically change to a receivable channel.



- Using the control assist buttons

1. Push the **選局** control assist button.



2. Push the **選局** control assist button.

△ increases the channel

▽ decreases the channel

If pushed continuously until a beep is heard, the channel will automatically change to a receivable channel.

