

 
2. Select the desired information using the control assist buttons.
3. If the program sub menu is displayed, push the control assist button of the desired program menu.

Advice:

- If there is no information in the selected program, a message will be displayed, and the screen will return to the menu in step 2.

4. The text information will be displayed in the screen.

Push the   control assist buttons to advance the information pages.

5. When returning to the program menu screen, push the  control assist button.

Advice:

- Program menu content will differ depending on the station.
- When the FM multi screen is changed once to the navigation screen, and then changed back to the FM multi screen, the program may take a little time to be displayed.

