

## SURROUNDINGS INFORMATION

The outside temperature, compass, altitude and GPS information can be viewed.

Push the **画面切换** screen change button to change from another screen to the surroundings information screen.

Each time the screen change button is pushed, the screen display will change as follows:

Driving Information → Audio → Air

Conditioner → Surroundings Information

