

The voice guide does not work	Ensure the volume is not set to 消.	Adjust the volume.
	You may have come off the selected route.	The voice guide will only work when on the correct route
The current location is not displayed	Current location memory will be cleared when battery terminal is removed.	After driving for a while, this will be adjusted automatically when GPS satellite reception is possible
The screen is slow or dark	The inside vehicle temperature is low.	This is a characteristic of LCD screens and does not indicate a fault. The screen will automatically change when the temperature rises
The screen looks black or white from an angle. There are small black or coloured (red, blue, green) spots in the screen.		This is a characteristic of LCD screens and does not indicate a fault.