

Outside Thermometer


Displays the temperature outside when moving.

Advice:

- The outside temperature can be displayed from -30°C up to 50°C.
- Depending on the driving conditions, the actual outside temperature may differ to the display.

Compass


When the ignition is ON, the compass will display the current direction using 16 compass points.

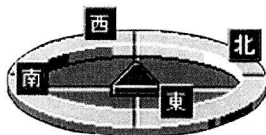

Altitude Meter

Displays the current altitude of the vehicle.

Displays altitude from 0~3000m.

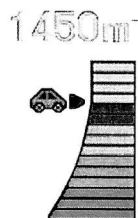

Advice:

- When the altitude is less than 50m, "50m 以下" will be displayed.
- The altitude meter will not be displayed if the map CD is not inserted.

GPS Information

Displays the number of receiving satellites.

