

 
Cuing Desired Track

Select the desired track number by pushing the track selection button or the

トラック control assist button.

Λ will increase the track number

∨ will decrease the track number



Repeating Track

During playback, push the **リピート** control assist button. The repeat indicator will be displayed onscreen. Push the button again to cancel.



Randomising Track Order

Push the **ランダム** control assist button.

The random indicator will be displayed

onscreen and the player will randomly

select tracks from the disc being played.

Push the button again to cancel.

