



Changing the Audio Multi-Broadcast

1. Push the picture/sound quality button, and then the **TV設定** (TV Settings) control assist button.

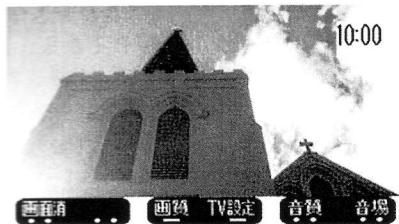

2. Push the **次ページ** control assist button.

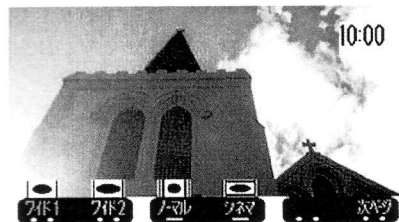

3. Push the **音声主** (Main), **音声副** (Sub), or **主+副** (Main + Sub) control assist button to select the desired audio type.



Advice:

Audio selection is only possible when receiving TV audio multi-broadcasts. The button will not be displayed on the video screen.