

### Advice:

- If the number of receivable stations is less than 8, only the receivable number will be displayed.
- When there are no receivable stations 受信可能局がありません will be displayed on the screen.

When tuning automatically one more time, push the **オートメモリ** control assist button until a beep is heard.

- If battery terminals are removed, memory will be cleared.
- When outside the reception area for the stored station, when the memory button is operated, the station name may be different.

### Traffic Report

Function available in Japan only.

