

Changing Screen Mode


The screen mode can be changed.

1. Push the picture/sound quality button, and then push the **TV設定** (TV Settings) control assist button.



2. Select desired screen mode using the following control assist buttons:

ワイド1	Wide screen 1
ワイド2	Wide screen 2
ノーマル	Normal
シネマ	Cinema

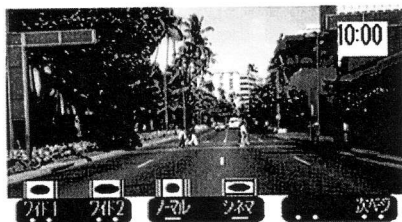

Advice:

- The TV settings button operation, and changing of the screen mode can only be performed when audio is in TV/ video.