

Driving Time

Diesel Only



 
Displays the driving time since the ignition was put in ON.

Reset the current driving time by turning the ignition to LOCK.

 
Battery Terminal Removal

When removing the battery terminal, the vehicle settings will be cleared.

Perform the following procedure.

1. Select the driving information screen using the screen change button.
2. Push the   control assist button to select the vehicle model.
3. Once selected, push the  control assist button

Advice:

If a mistake is made with the vehicle settings, give the  control assist button a long push (more than 5 seconds) to reset.

