

AUDIO

Radio, CD (Compact Disc), and MD (Mini Disc) operation.

May be used when ignition is in ON or ACC.

To change from another screen (such as navigation, FM Multi, driving information) to the audio screen, push the 画面切換 button.

Each time this button is pushed, the screen display changes through the following:
Driving information→Audio→Air Conditioner→Surroundings Information

Advice:

- The screen will temporarily change to the audio screen when the AM/FM, TAPE/CD/MD, or Tuning/Track Selection buttons are pressed.