


Push the eject button (panel open/close button) to open the panel.
Insert the tape into the tape insertion slot, push lightly. The panel will automatically close and playback will begin.

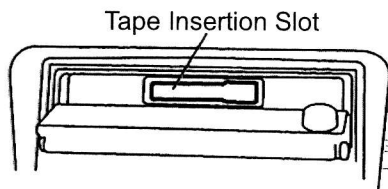

When one side of the tape has finished, playback of the other side will begin automatically.

To change to tape mode when listening to the radio, CD or MD, push the **TAPE** button.

Each time the tape button is pushed the mode will change as follows:
Tape → Navigation Unit CD → CD Player (or In-Dash CD Changer) → CD Changer → MD Player → MD Changer
(The mode of devices not connected will not be displayed.)