



- When handling CDs, hold the centre hole and outside edge, with the label facing up. If the reflective surface is touched directly, the disc will become dirty and the sound may be affected.

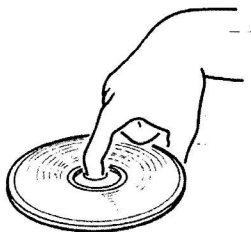

- Do not write on with ball point pen, or apply cellophane tape, stickers, or paper, to the label or reflective surface of the CD.
- If CD singles (8cm discs) are set in the magazine, they may become irremovable. When using a CD single in a CD changer, use an 8cm compatible magazine.

- To clean a dirty CD, use a soft and dry cloth, and wipe lightly from the centre of the CD in a straight line to the outside edge.

Also, using record spray, anti-static agent, alcohol, benzine, thinner, and other solvents and chemically enhanced cloths, may damage the CD, rendering it unusable.

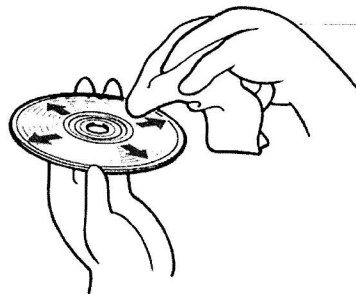

- Do not use cracked or warped discs, as they may cause damage to the player.