

BASIC OPERATION


Turning the power on.

Push the power switch. Push once more to turn the unit off. The power will also be turned on by pushing the AM/FM button, or by inserting a cassette tape or CD.

Volume and Tone Adjustment

- Volume Adjustment

The volume can be adjusted using the volume adjustment knob.

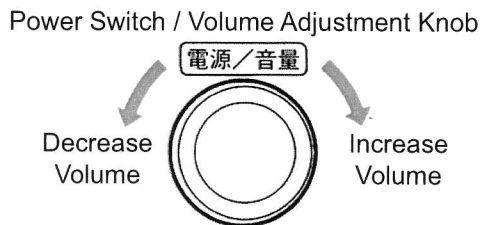


Caution:

To prevent accidents, when driving, keep the volume at a level where outside noises are audible.

- Tone Adjustment

1. Push the picture / sound quality adjustment button.

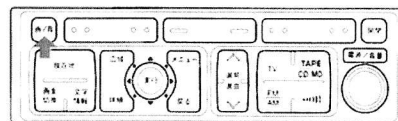

2. Push the **音質** control assist button.

