


WATCHING TELEVISION



Picture / Sound
Quality Button

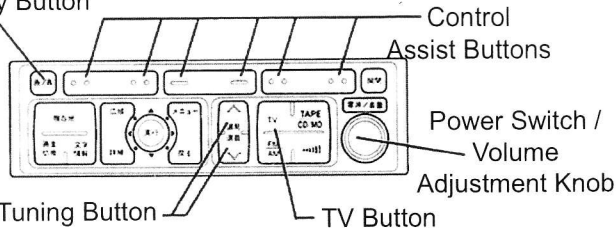

Tuning Button

TV Button

Switching Power On/Off

Push the TV button, to display the TV reception screen.

The station name and channel number of the channel being received, or the receivable stations will be displayed at the top of the screen.

To turn the power off, push the power switch.

Volume adjustment

Adjust by turning the volume adjustment knob.

Advice:

- The channel display will turn off after about 10 seconds.
- Depending on the reception, and reception area, only the channel number, and not the station name, may be displayed.

Power Switch / Volume Adjustment Knob

