

Repeating Track

1. Push the **設定** control assist button.



2. Push the **リピート** control assist button.
When this button is pushed, the repeat indicator will be displayed onscreen.
Push again to cancel.



3. Push the **戻る** control assist button to return to step 1.

Skipping Silent Areas

1. Push the **設定** control assist button.



2. Push the **スキップ** control assist button.
When this button is pushed, the skip indicator will be displayed onscreen.
While the tape is playing, if a silent area continues for longer than 15 seconds, 曲送り 1 (Track advance 1) will be displayed, and the next track will be cued automatically.
Push again to cancel.



3. Push the **戻る** control assist button to return to step 1.