


Internal MD Player Type

Push the eject button (panel open/close button) to open the panel.

Insert the MD into the MD insertion slot, push lightly, and playback will begin.

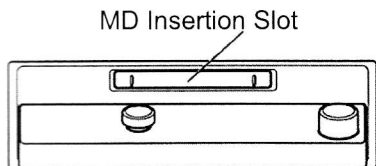

To change to MD mode when listening to the radio or a CD, push the MD button.

Each time the MD button is pushed the mode will change as follows:

MD → Navigation Unit CD → CD Player (or In-Dash CD Changer) → CD Changer → MD Changer

(The mode of devices not connected will not be displayed.)

Advice:

- Audio operation is not possible when the panel is open. Gently push in an MD to close the panel.
- The panel will automatically close in the following situations:
 - The ignition is turned to LOCK
 - The panel is left open for 30 seconds without an MD in the MD insertion slot.

Internal Tape Player Type

Set the MD player to MD and playback will begin automatically.

To change to MD mode when listening to the radio or a CD, push the MD button.

Each time the tape button is pushed the mode will change as follows:

Tape → Navigation Unit CD → CD Player (or In-Dash CD Changer) → CD Changer → MD Player → MD Changer

(The mode of devices not connected will not be displayed.)