

When the MD button is pushed, the MD changer will begin playback.

Internal Tape Player Type

Each time the MD button is pushed the mode will change as follows:

Tape → Navigation Unit CD → CD Player (or In-Dash CD Changer) → CD Changer → MD Player → MD Changer

(The mode of devices not connected will not be displayed.)

Internal MD Player Type

Each time the MD button is pushed the mode will change as follows:

MD Player → Navigation Unit CD → CD Player (or In-Dash CD Changer) → CD Changer → MD Changer

(The mode of devices not connected will not be displayed.)

Disc Select

Push the **ディスク** control assist button to select the desired disc.

Λ will increase the disc number

∨ will decrease the disc number

Cuing Desired Track

 
Select the desired track number by pushing the track selection button or the

トラック control assist button.

Λ will increase the track number

∨ will decrease the track number

Increase



Decrease