


- Adjust tone to desired level by pushing the control assist button of the tone type you wish to adjust from bass (低音), mid-tone (中音), and treble (高音).

Each time a button is pushed, the levels display will move up/down, and the tone will change.




- Sound Balance Adjustment

- Push the screen/sound quality button
- Push the **音場** control assist button.

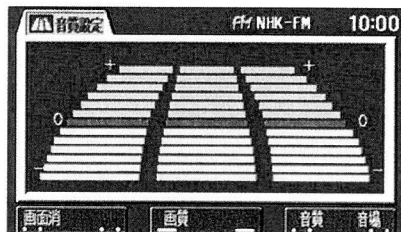

- Adjust the volume balance left/right (左右), front/rear (前後) by pushing the respective control assist button. Each time the button is pushed, the cursor moves, displaying the volume balance.

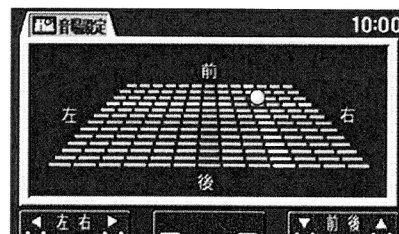

Advice:

Approximately 10 seconds after adjustments are complete, the screen will return to the display from before the picture/sound quality button was pushed.