



Put the speed adjustment dial and the air vent selection dial in the AUTO position and select the desired temperature with the temperature adjustment dial.

Air vents (excluding  and ) , fan speed, air conditioner ON/OFF and fresh/recirculated air settings will be adjusted automatically.

The vehicle owner's manual explains more on using the air conditioner effectively.