

### Repeating Track

During playback, push the **リピート** control assist button. The repeat indicator will be displayed onscreen. Push the button again to cancel.



### Randomising Track Order

Push the **ランダム** control assist button. The random indicator will be displayed onscreen and the changer will randomly select tracks from all the set discs. Push the button again to cancel.

