

Playback will begin automatically when the CD is inserted into the CD insertion slot. To change from MD or radio mode to CD mode, push the CD button.

Internal Tape Player Type

Each time the CD button is pushed the mode will change as follows:

Tape → Navigation Unit CD → CD Player (or In-Dash CD Changer) → CD Changer → MD Player → MD Changer

(The mode of devices not connected will not be displayed.)

Internal MD Player Type

Each time the CD button is pushed the mode will change as follows:

MD Player → Navigation Unit CD → CD Player (or In-Dash CD Changer) → CD Changer → MD Changer

(The mode of devices not connected will not be displayed.)

Caution:

To set a music CD in the navigation unit, stop the vehicle in a safe place before proceeding.

Advice:

- GPS navigation cannot be operated when a CD is being played in the navigation unit. When you wish to listen to a CD while operating the GPS navigation, install a separately sold CD player or CD changer.
- When listening to a CD through the navigation unit, the surroundings information screen altitude meter will not be displayed. Also, because GPS map matching will not operate, when the map CD is replaced, the current location may be incorrect.