

## Repeating Track

1. Push the **設定** control assist button.



2. Push the **リピート** control assist button. When this button is pushed, the repeat indicator will be displayed onscreen. Push again to cancel.



3. Push the **戻る** control assist button to return to step 1.

## Randomising Track Order

1. Push the **設定** control assist button.



2. Push the **ランダム** control assist button. The random indicator will be displayed onscreen and the changer will randomly select tracks from all the set discs. Push the button again to cancel.



3. Push the **戻る** control assist button to return to step 1.