

- Automatic Storage

Up to 8 receivable AM and FM stations can be automatically stored in order of the best reception state.


1. Push the **選局** control assist button.



2. Push the **オートメモリ** control assist button until a beep is heard.



3. Check that the screen is automatically tuning.

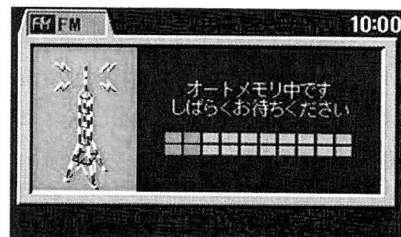

4. When automatic tuning is finished, the stored station will be displayed. Each time the **オートメモリ** control assist button is pushed lightly, the station will be changed in order of the lowest frequency.



5. Push the **戻る** control assist button to return to the screen in step 1.