

3. On completion of automatic tuning, the stored channel will be displayed.



4. From now, each time the **オートメモリ** control assist button is pushed lightly, the channel will change.
5. Push the **戻る** control assist button to return to the screen from step 1.

Advice:

- If the number of receivable stations is less than 8, only the receivable number of stations will be displayed.
- When there are no receivable stations 受信可能局がありません will be displayed on the screen.

When tuning automatically one more time, push the **オートメモリ** control assist button until a beep is heard.

- If battery terminals are removed, memory will be cleared.

